


## On floor control quadrant protection

When the helicopter is operated with only one pilot for internal load transport, casualty-carrying or other specific mission, a shield can be installed to protect the control quadrant, located in bottom on the LH side of pilot's seat.

It prevents in particular the levers from being handled by inadvertence by a casualty on stretcher.

The protection consists of an L-shaped bulkhead, fixed on the floor.

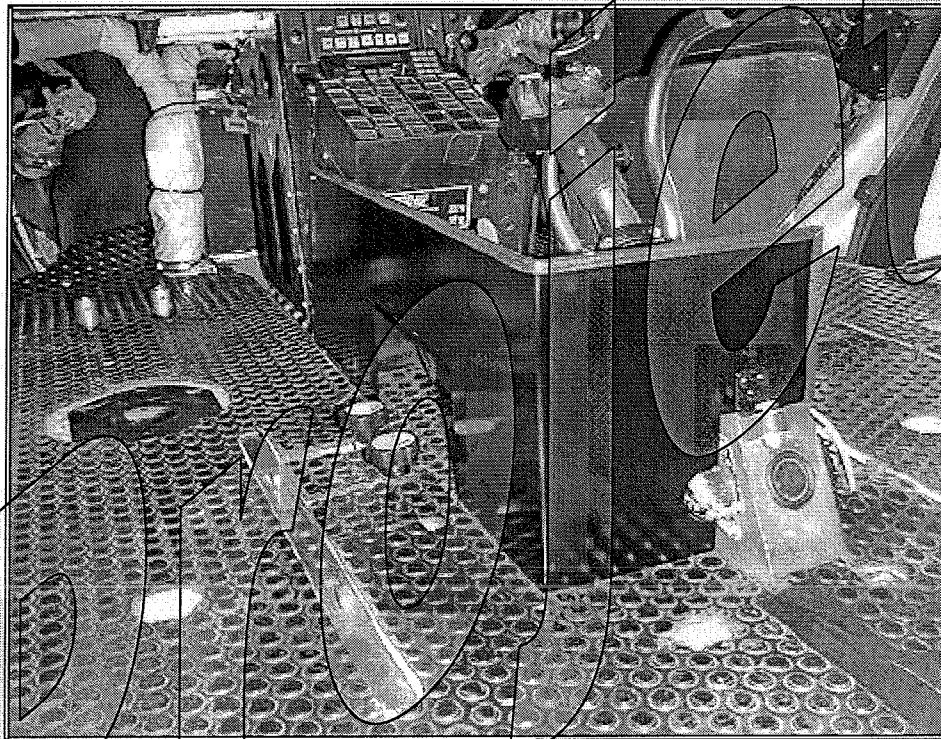

### Important note:

This optional is incompatible with all type of operations realised with two pilots and/or for training mission.